

OWNER'S MANUAL

English

CAR MOBILE

ENTERTAINMENT




CAR STEREO
FM/AM RADIO
DVD/MP4/MP3/CD/VCD/WMA MEDIA PLAYER





Thank you for purchasing our company multimedia player!
To operate the unit correctly, please read the owner's manual carefully before using the unit. Keep these instructions and retain this booklet for future reference.


CONTENTS


- Notes on Installation..... 2
- Precautions..... 3
- Wiring Diagram..... 4
- Location of the Remote Control..... 5
- Remote Control Operation..... 6
- Playing WMA,MP3 and JPEG discs..... 18
- Location of the Panel Control..... 19
- Installation..... 20
- Specification..... 21
- Simple Troubleshooting Guide..... 22


 The unit is designed for 12V DC,negative ground operation System only.Before installing, the unit make sure your vehicle is connected to DC 12V negative ground electrical System.

 The negative battery Terminal must be Disconnected before making connections, which can reduce damaging the unit dun short circuit.

 Be sure to connect the color coded leads correctly according to the diagram. Incorrect connections may cause the unit malfunction or damage the vehicle's electrical system.

 Be sure to connect the speaker(-) leads to the speaker (-) terminal. Never connect the left and right channel speaker cables each other or to the vehicle body.

 Do not block vents or radiator panels. Blocking them will cause heat to build up inside and may result in fire.

 After the completion of the installation and begin to play the unit(including replacing the battery),please press the RESET button on the front panel with pointed objects (such as ball-point pen)to set the unit to initial status.

This unit can play the following discs only.

 
Type of disc	Label on the disc	Recorded material	Size of disc
MP4	MP4	Sound and moving Pictures	12cm
DVD	DVD VIDEO	Sound and moving Pictures	12cm
VCD	VIDEO CD	Sound and moving Pictures	12cm
MP3	MP3	Sound only	12cm
CD	COMPACT DISC DIGITAL AUDIO	Sound only	12cm
USB	USB/HDD	Sound and moving Pictures	—
SD	SD/MMC	Sound and moving Pictures	—

Note: ① The unit is compatible with DVD, VCD, VCD 1.0/2.0/3.0/VCD, CD-R, PICTURE-CD version Disc.
 ② The manual conforms to DVD, VCD, MP3 and CD. If no VCD or MP3 on some models you should ignore them. While enjoying DVD, VCD, MP3 and CD. The Display will automatically identify the discs and indicate the corresponding words.
 ③ Some model is no USB SD input port.

- Do not attempt to modify the unit, modifying the unit may cause an accident.
- Stop the vehicle before carrying out any operation that could interfere with your driving.
- Do not work in extreme high or low temperature inside the vehicle is between +60°C and -20°C before turning your unit on.
- To enjoy optimum sound and images while playing, handle the discs as follows:
 - Handle the disc by its edge to keep the disc clean, and do not touch the surface.






Do not use your Cds with paste residue or ink attached.

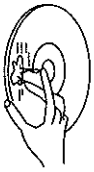

Do not use CDs with labels or stickers attached, which may leave a sticky residue while beginning to peel off. (Shown as picture)



   Clean the discs with an optional cleaning cloth. Wipe each disc from the center out. (Shown as picture)

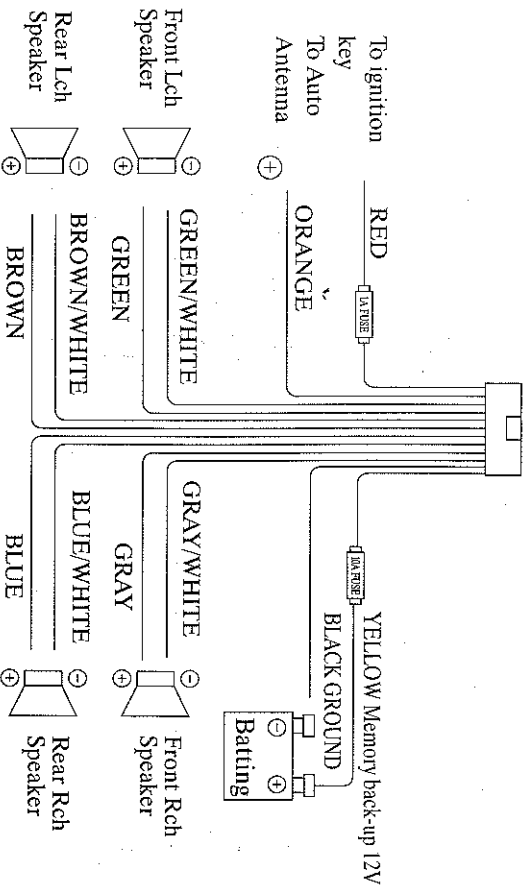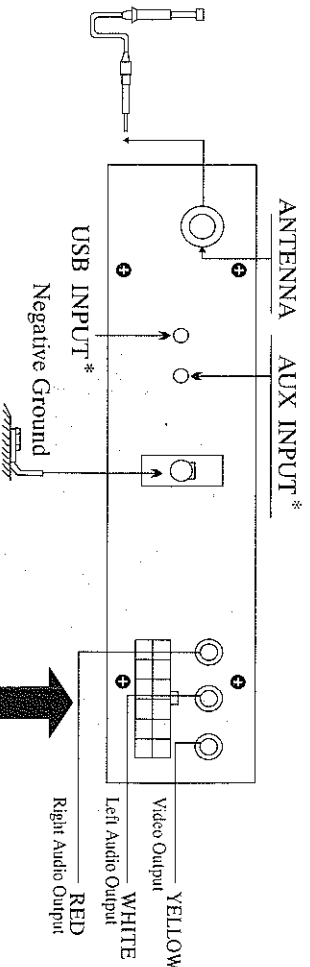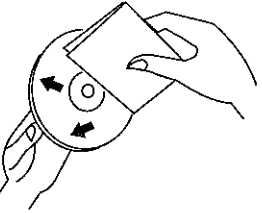

* Remark: Some Model is no this input port.

★ Volume Increasing/Decreasing

— Press **7** (VOL+ or VOL-) button to increase or decrease the volume level respectively.

★ Tuning/Selecting Tracks

/FastRewind/Forward

— During radio mode, continuously Press **8** (← or →) button to manual search a station downward or upward respectively; if press and hold **8** (← or →) button for more than 3 seconds, the radio will automatically search a station downward or upward respectively until it finds a station

— During the playing mode, press and hold **8** (← or →) button to fast rewind or fast forward for you to reach your desired track quickly.

When disconnection press **8** (← or →) button, you can select your desired portion downward or upward respectively.

— During CD, VCD, DVD mode, you can set the program order to play, you can follow the steps as below: Firstly press **16** (PBC) button, and then press **9** (PROG) button, and the television displays programming P00:00. You can set the program order to play them by using **14** (0~10+) button, and then press **2** (▶) to play.

Note: Program doesn't function in playing Mp3.

★ VOL/BAS/TRE/BAL/FAD Selector

— Repeatedly press **11** (SEL) button to select the desired mode in the following order.



Note: After selecting your desired mode, you can adjust the current mode being displayed by using (VOL+ or VOL-) buttons. When PEQ mode is activated, press SEL button to select the modes as shown below. Bass/Treble are invalid under the PEQ mode.



★ Repeat Playing/AMS

— During DVD mode, firstly Press **12** (AMS/RPT) to repeat the current track being played; press it again to repeat playing all the tracks. The third press it to cancel the repeating functional.

— During CD, MP3, VCD, DVD mode, firstly press **12** (AMS/RPT) to repeat the current track being played; press it again to cancel the repeating functional.

Note: In DVD, VCD, MP3, CD mode, The initial procedure is repeat playing all the tracks

*Note: In radio mode press **12** (AMS/RPT) to scan each stored station 10 seconds respectively which stored in Number Buttons.*

★ Random Playing

— During playback mode, press **13** (RDM) button to play any track at random.

Note: RDM is not functional in DVD mode.

★ Number Buttons

— During radio mode, you can select one of the 6 stored stations on each hand by pressing any one of the number button **14**

— During the playing mode, you can select any track directly by using **14** number button (0~10+). For example, if you need the fifteenth track, you can first press button 10+ and then press button 5, the corresponding track (15)th will be played.

Note: When button 10+ is first pressed, it works as 10+. It works as 20+ when pressed at the second time, the third time...30+... and the like.

In PBC playback mode, Number Button is not functional.

★ Left/Right/Stereo Selector

— During the playing mode, continuously press **15** (Audio) can change the sound to left/right speaker or stereo mode.

Note: There are 5 grades surrounding effect in surround mode. During VCD mode you can see the different pictures indicating different effects on the television.

★ Playing PBC(menu)

— During DVD mode only, when pressing **16** (PBC) button at the first time, PBC playback starts and the menu or entire disc appears on the television. And then you can select your favorite track by using number button **14** (0~10+). When a track is playing, you can press **20** (STOP/RETURN) button to return to the menu if you want to stop to select other tracks. To cancel PBC playing, press **16** (PBC) button again.

★ Subtitle Selector

— During DVD mode, press **17** (SUB-T) button to switch the subtitle supported by the DVD disk.

★ Setting CD Playback Time

— In VCD, CD mode, press **18** (GOTO) key and set the time when you begin to play the track, and the television will display the time---. Enter your desired time by pressing number button **14** (0~10+). For example, enter: 25:00, it will automatically start playing the track from the point if twenty-fifth minutes in the disc.

— In DVD playing mode, press **18** (GOTO)key once and input a desired track number. Then press **21** (▶||)key to play the DVD from the position corresponding to the track number selected.

— In DVD playing mode, press **18** (GOTO)key twice and input a desired time to play the DVD from the position corresponding to the time selected. For example, press **18** (GOTO)key twice and the television will display the time--:--:--. Enter you desired time by pressing number button **14** (0~10+). Then press **21** (▶||)button, it will automatically start playing the track from the point of your desired time in the disc.

Note: No time play function for MP3.

★ Mode Switch

— Press **19** (MODE) button to switch to playback mode

★ Stop the playback

— In DVD mode: Press **20** (■/|) button to suspend the playback and “PRE-STOP” shown on TV. Press it again to stop the playback.

Note: In VCD, MP3 and CD, Press this key once to stop.

★ MULT-ANGLE KEY

— In DVD playing mode, press **21** (ANGLE) key. You can watch the DVD content from different angle.

Note: In VCD, MP3 and CD. It is not the function

★ SLOW REVERSE/ SLOW ADVANCE KEY

— Press **22** Slow button when pictures moving, you can enter Slow Motion Playback mode.

— Press the Slow button on the remote during playback. Press the button again on the remote to play at the next speed. Slow Motion Playback has six speeds: 1/2, 1/3, 1/4, 1/5, 1/6, 1/7. With each consecutive press of the button, the play speed decreases. If you press the button seventunes. Slow Motion Playback cycles back to Normal Playback. Press Play button to resume normal playback.


21 (▶||) key to, cancel slow reverse /Slow advance function.

Note: In Mp3 and CD. It is not the function


★ Chapter 4 The Setup Menu System

1. General Steps of Setup Menu

 
1) Press the Setup button, the main setup menu appears. A When the main menu displayed, the DCD system will auto pause.

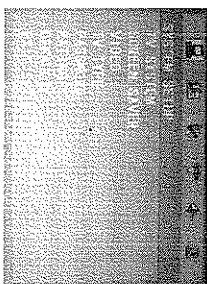

 2) Press the Left and Right arrow button to highlight the icon of the desired page, the press the Down or Right arrow button to activate that page. For example, if you want to setup the video page, press Right to highlight the video icon, the video page will be displayed on the screen.

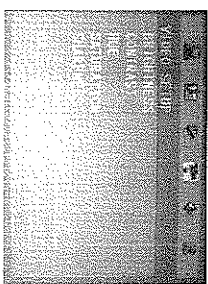

 3) Press the Down arrow button to highlight the desired option. Press Enter or press Right to select, the choices of that option appear on the right. For example, press the Down arrow button to highlight the BRIGHTNESS option, then press Enter to select, the brightness choices appear on the right.

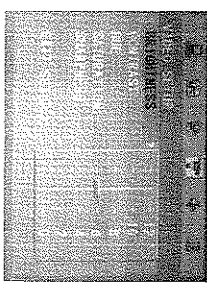

4) Press the Arrow buttons to highlight the Exit Setup option, then press Enter or Setup again to exit Setup Menu.

Notes:

 
When setup, the pressing of the following buttons will turn off the setup menu, while the choices that have been changed will be saved: P/N, Subtitle, F.F.F.R. Vol +/-, PBC, PBC, Title, Return, Play, Stop, Resume, Pause/Step, Next, prev, S.F.S, R.Zoom,

Preview, Goto, Program, Repeat, A-B, Angle, language, Soundtrack, 3D, Record, Display, Mute, Setup.

2. Setup Items Introduction

★ **SYSTEM SETUP**

The system setup options are illustrated below:

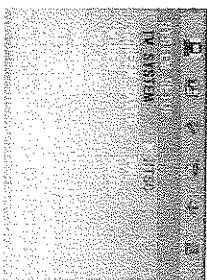

★ **TV SYSTEM**

 
According to the Color System of the TV, you can choose the TV System.

AUTO: Choose this settings if your DVD player is connected to a multi-system TV.

NTSC: Choose this settings if your DVD player is connected to a NTSC TV.

PAL: Choose this settings if your DVD player is connected to a Pal TV.

The default setting is NTSC.

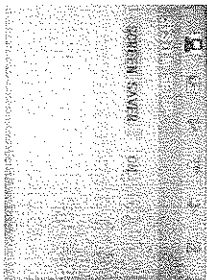


★ **SCREEN SAVER**

If the screen saver is on, when your DVD player is in Stop, Open, or No Disc state, or there is a frame frozen for more than 60 secretary, the screen saver will be displayed. This feature can protect the screen from damage.

ON: Choose this setting to act to activate the screen saver.

OFF: Choose this setting to cancel the screen saver

 The default setting is ON.

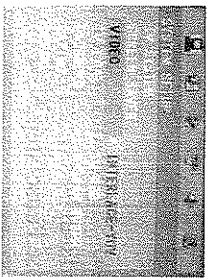

★ **VIDEO**

 
Interface-YUV: Choose this setting if your DVD player is connected to a TV with Y, Cb, Cr video cables.

TV-RGB: Choose this setting if your DVD player is connected to a TV with an S-P-SCAN: Choose this setting if your DVD player is connected to a progressive scan TV with Y, Cb, Cr video cables.

PC-VGA: Choose this setting if your DVD player is connected to a progressive scan TV or a monitor with a VGA video cable.

Notes:

When your DVD player output composite video, you can choose the setting randomly. Choose TV-RGB/P-SCAN if your DVD player is connected to a progressive scan TV. The default setting is TV-RGB.

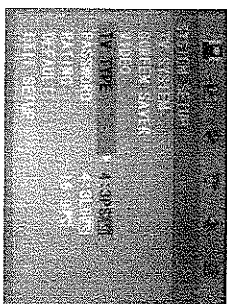

★ **TV TYPE**

16:9 (Wide Screen): Choose this setting if your DVD player is connected to a wide screen TV. If you Choose this setting and you don't have a wide screen TV, the images on the screen may appear distorted due to vertical compression.

4:3LB (Letter Box): Choose this setting if your DVD player is connected to a normal ratio TV, connector You'll see the movies in their original aspect ratio (height-to-width ratio). You'll see the entire frame of the movie, but it will take up a smaller portion of the screen vertically. The movie might appear with black bars at the top and bottom of the screen.


4:3 PS (Pan & Scan): Choose this setting if your DVD player is connected to a normal ratio TV. You can fill the movie to the entire screen of your TV. This might mean that parts of the picture (the left and right edges) won't be seen.

Notes:

The image display ratio is related to the recorded disc format. Some disc can not display images in the aspect ratio you choose.


If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen.

 You must adjust the screen setting depending on the type of the television you have.

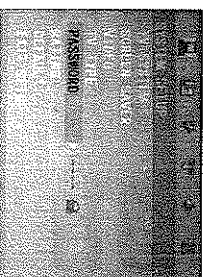

★ PASSWORD

 The password option is initialized locked, and you cannot set the ratings limit or change the password. In order for the Ratings feature work, the password mode must be turned on. If you want to set the ratings limit, you will need to enter the default password, which is 0000, then press Enter to confirm. To change the password you will be prompted for the old password, then be prompted for a new. Enter 4-digit number (this is your password).

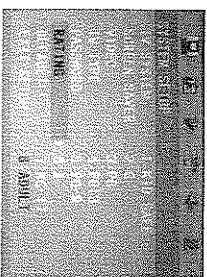

★ RATING

The Rating feature is a rating limit system, like movie ratings. It works with DVD discs that have been assigned a rating. This helps you control the types of DVD that your family watches. There are two rating options: NO ADULT and KID SAFE. Select the VIEW ALL option to cancel the rating limit. The default setting is VIEW ALL.

Notes:

 
If the password option is locked, you cannot set the ratings limit; the rating limit does not work when the password option is unlocked.

★ DEFAULT


Choose this option to resume all the setup options to default settings.

★ LANGUAGE SETUP

The language setup options are illustrated below:

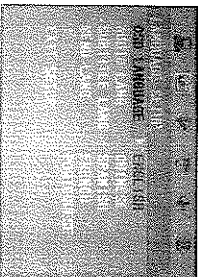


 Highlight the OSD LANGUAGE option, and press the Arrow buttons to choose the OSD language you prefer. Press Enter to confirm, and it will display OSD in that

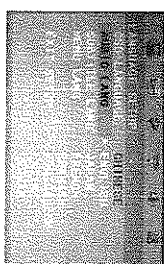


Language: There are 8 optional OSD languages: Chinese, English, Japan, French, Spanish, Portuguese, German and Latin.

 Highlight the AUDIO LANG option, and press the Arrow buttons to choose the audio language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will output audio in that language; There are 8 optional audio languages: Chinese, English, Japan, French, Spanish, Portuguese, German and Latin.

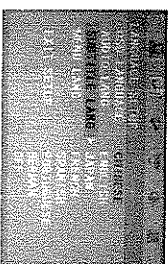

 Highlight the SUBTITLE LANG option, and press the Arrow buttons to choose the subtitle language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will display subtitles in that language; There are 8 optional audio languages: Chinese, English, Japan, French, Spanish, Portuguese, German, and Off.

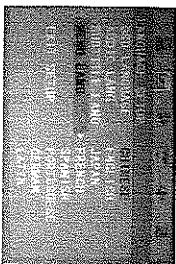

Highlight the MENU LANG option, and press the Arrow buttons to choose the menu language you prefer. Press Enter to confirm. If the disc you are playing has that language available, it will display menu in the language; There are 8 optional menu languages: Chinese, English, Japan, French, Spanish, Portuguese, German, and Off.

 
Notes:

If your preferred language isn't available, the disc's default language will be played.

The default language of your DVD player is Chinese.

★ AUDIO SETUP

The audio setup options are illustrated below:

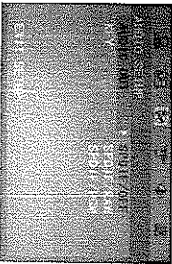

Remote Control Operation

English

Remote Control Operation

 
English

★ VIDEO SETUP

The video setup options are illustrated below:


★ BRIGHTNESS

Use the Up and Down arrow button to move the scroll and adjust the brightness.

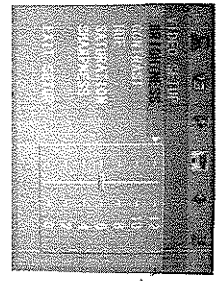


★ CONTRAST

 Use the Up and Down arrow button to move the scroll and adjust the contrast.

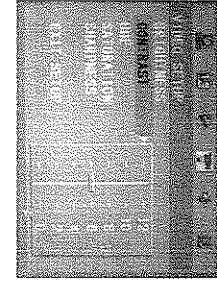


★ HUE

 Use the Up and Down button to move the scroll and adjust the hue.

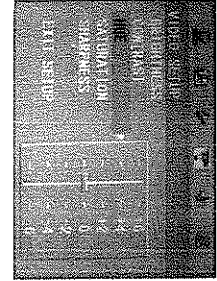

★ SATURATION

 Use the Up and Down arrow button to move the scroll and adjust the saturation.

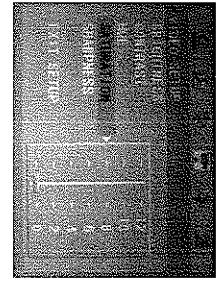

★ TITLEKEY

— In DVD, VCD playing mode, press **[24]** (TITLE) key to show all tracks' title on TV screen. Then press **[0-10+]** key or press **[4]** ($\blacktriangle/\blacktriangleright$ / $\blacktriangleleft/\blacktriangleleft$) key to choose your desired track number and press **[7]** (ENTER) key or **[21]** (\blacktriangleright) key to start.

*Note: 1. No title display in Mp3, CD mode
2. For choose a desired language to press title key.*

★ ZOOM KEY

— The **[25]** Function allows you to enlarge or zoom out the video image and to pan through the image. Press Zoom repeatedly to activate the function and choose the required zoom factor: Zoom1, Zoom2, Zoom3, Zoom1/2, Zoom1/3, Zoom, Zoom Off. Notes: This feature does not work when the Disc Menu appears. Use the Arrow buttons to pan across the screen when the zoom factor is 1, 2 or 3.

★ REFERENCE:

 
— To protect your DVD player, the interval between two consecutive power button operations must be above 30 seconds.

— No using for a period of time, please pull out the plug from the electric outlet.

The player should be operated only on condition that the type of power supply corresponds to the marking label. Otherwise, it doesn't work or even be damaged.

If the player stops playback by accident, please power it on again.

★ Ejecta Cds

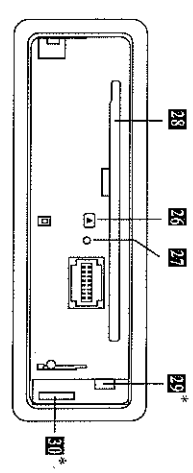


1. Press **[26]** Eject button (\blacktriangle) to eject the disc.
2. Press **[27]** Res button to Reset System.
3. **[28]** Disc In/out Window.
4. **[29]** USB/HDD Input port.
5. **[30]** SD/MMC Input port.

* : Some Model is no USB SD input port.

★ Chapter 3 Playing WMA,MP3 and JPEG discs

 Place a MP3/JPEG disc into the tray,and the player will auto search the directories saved Mp3/JPEG files.After searching,it will auto go to the first directory saved Mp3 files (to the disc containing both mp3 and jpeg files;to the disc containing single type of files,it will auto go to the first directory)and play the first song in the directory ("01:" is highlighted). The screen displays as the picture below:

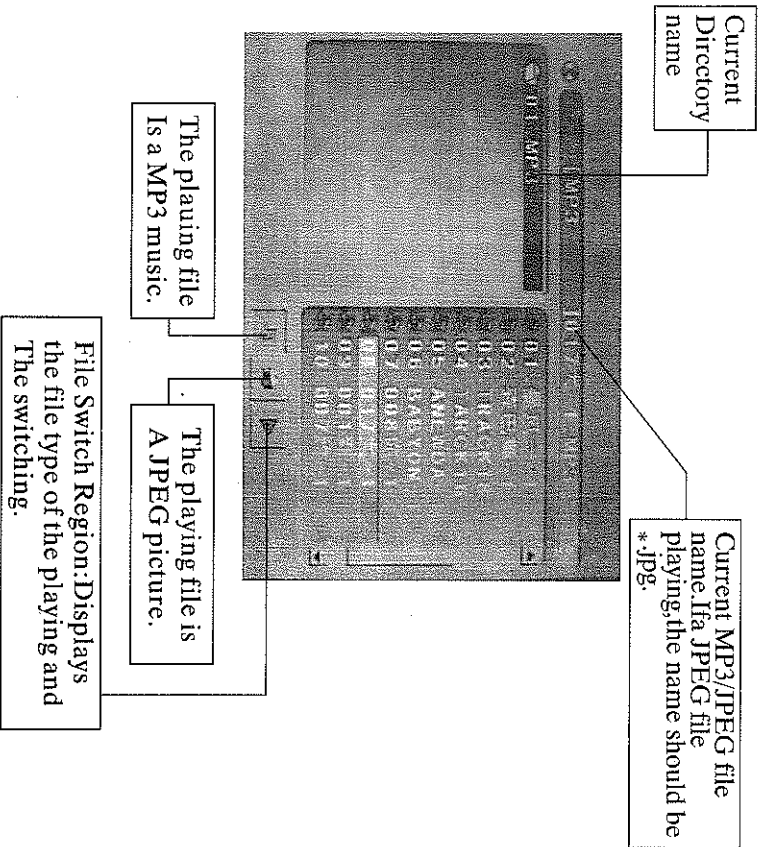

Use the Arrow buttons to enter the Directory Region and highlight the desired directory,then the first track under it starts playback;Also you can use the Arrow buttons to enter the File Region and select the file you want to play.

Notes:

Press the Left and Right arrow buttons,you can activate Directory Region, File Region and File Switch Region separately.

The highlight in Directory Region and File Region is shown as the picture

above;While it appears a transparent rectangle in File Switch Region.

In File Switch Region,you can press the Left and Right arrow buttons to switch the highlight,then press Enter,the M,P,and G button is illustrated in the above picture.For example,if a disc with Mp3 and Jpeg files but without any NES files is loaded,the color of the letter M and

"P" will appear to white and "G" black.If a Mp3 file playing, "M" turns darker.

To the disc with WMA,MP3 and JPEG files,when playing a JPEG picture, press the Return button to return to JPEG list.

You can press the Numeric buttons to select the file you want to play.For example, if you desire the 15th track in current list,press the "10+" button once,then press "5", the 15th starts playback.

Notes:When playing a disc with Mp3 files,video can not be output while only digital audio can.

When playing JPEG pictures,press the Program button to choose the pictures Switched mode;There are 17 switch modes;Press Program repeatedly to activate the function and choose the required switch mode;Spread from Up to Down, Spread from Down to Left,Spread from Left to Right,Up to Left Down,Spread from Left Up to Right Down,Spread from Right Up to Left Down,Spread Left Down to Right Up,Spread from Right Down to Left Up,Spread from Center to Up/Down,Fold from Up/Down to Center,Fold from Left/Right to Center, Horizontal Shutter, Vertical Shutter, Fold from the Corners to the Center, Random Play, Off

When a picture playing or pausing,press the Arrow buttons to change the display angle:

- Up:flip vertical
- Down:flip horizontal
- Left:rotate908 counter-clockwise
- Right:rotate908 clock wise

When a picture playing or pausing,press the Menu button,the screen displays small pictures;Up to 12small pictures are displayed per screen.To view the next 12 pictures,press the Next button to go forward and the prev button to go to the previous page.You can also select and play a picture in full screen by press that number on the remote.

Location of the Panel Control

 
English

- 1** PWR/POWER/ : Power Button
- 2** MODE/MOD : Mode Switch
- 3** MUTE/MUT/ : Mute Button
- 4** BAND/BND : Band Selector
- 5** CLOCK/CLK/ : Clock Button
- 6** EQ : EQ Button
- 7** PRE/ : Manual(Seek)Down/Disk track up(Fast backward)button
- 8** NEXT/ : Manual(Seek)Up/Disk track down (Fast forward) button
- 9** 1,2,3,4,5,6 : Number Button
- 10** AMS/APS : Radio AMS Button
- 11** LOUD : Loud Button
- 12** VOL+ , VOL- : Volume Control
- 13** SEL : Setting the sound Characteristics
- 14** RES/RESET : Reset Button
- 15** : Eject Button


Installation

English


Parts List (The number in the list are keyed to those in the instructions)

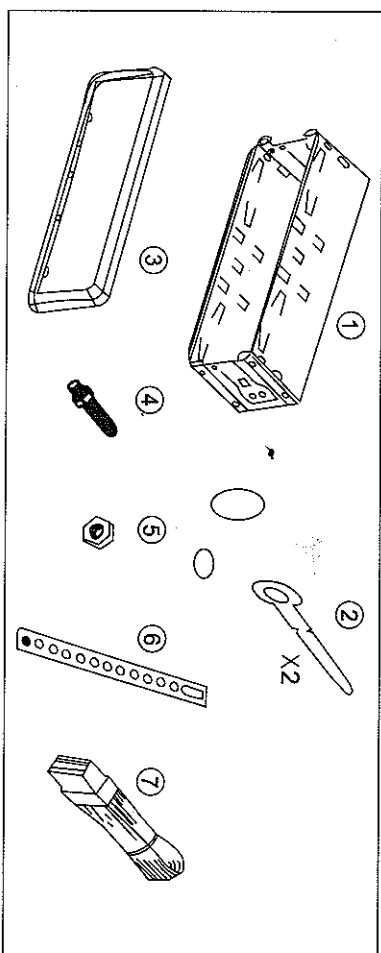

Mounting Example ①

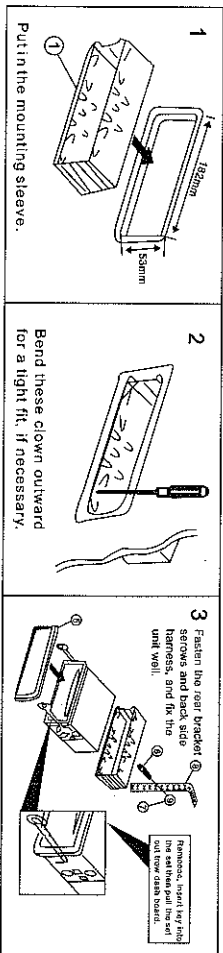 


DETACHING THE FRONT PANEL

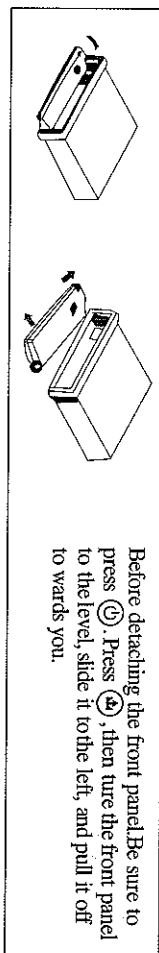 

Before detaching the front panel, be sure to press **14**. Press **15**, then turn the front panel to the level, slide it to the left, and pull it off to wards you.

 REPLACING THE FRONT PANEL

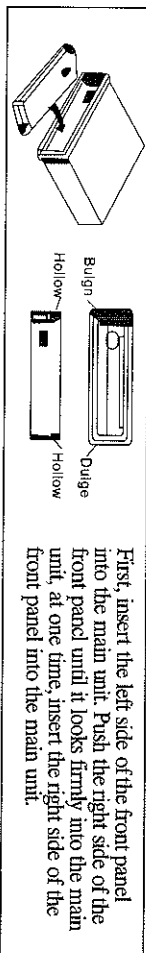

First, insert the left side of the front panel into the main unit. Push the right side of the front panel until it looks firmly into the main unit, at one time, insert the right side of the front panel into the main unit.

PRECAUTIONS



Do not touch the contacts on the front panel or on the unit body, since this may result in poor electrical contact. If dirt or dust get on the contacts, wipe them with a clean, dry cloth.

General

Power Requirements..... 12V DC
 Load Impedance 4-8Ω
 Max. Power Output 50W×4
 Tone Controls ±8dB(Bass 100Hz, Treble 10KHz)
 Dimensions Approx. 192x178x50mm (dxwxh)
 Mounting Dimensions Approx. 169x182x53mm (dxwxh)
 Weight..... Approx. 1.75kg

DVD Deck Section

Discs Played DVD, VCD1, 0/1, 1/2, 0/3, 0/MP3, CD, CD-R, CD-RW, PICTURE-CD
 Video System AUTO/PAL/NTSC
 Mounting Angle 0° to +/-30°

Video Section

Video System 4:3 Letter Box and 4:3 Pan Scan
 Video Output level 1.0Vp-p 75 ohms
 Horizontal Resolution 500

Audio Section

Maximum Output level 2Vrms(+/-3dB)
 Frequency Response 20 to 20KHz
 Signal-to-noise Ratio..... 85dB
 Separation 80dB

AM Tuner Section


Frequency Range 522-1620(Europe/China), 530-1710(U.S.A)
 IF Range 450KHz
 Usable Sensitivity(-20dB)..... 25dB

FM Tuner Section

Tuning Range..... 87.5-108(Europe/china), 87.5-107.9(U.S.A)
 IF Range 10.7KHz
 Usable sensitivity(-30dB) 15dB
 Signal-to-noise Ratio 60dB
 Stereo Separation 30dB(1KHz)
 Frequency Response 30~15000Hz

★ *Note: Due to continuous product improvement, specifications and design are subject to change without notice.*


Simple Troubleshooting Guide

Problem	Cause/Solution
No power	<ul style="list-style-type: none"> ★ Check and make sure whether the fuse is blown. Replace with the proper value if necessary. ★ Press the RESET button.
Some errors occur in the LCD or no function when pressing the button.	<ul style="list-style-type: none"> ★ Press the RESET button.
Unable to receive stations.	<ul style="list-style-type: none"> ★ Check and make sure whether the antenna is inserted or the antenna is properly connected. If so, insert the antenna or connect it properly.
Poor effect on receiving a station.	<ul style="list-style-type: none"> ★ Antenna may not be the proper length. Make sure the antenna is fully extended or broken. If broken, replace the antenna with a new one. ★ The broadcasting signal is too weak. ★ The antenna is poorly grounded, check and make sure the antenna is properly grounded at its mounting location.
ACDs cannot be loaded.	<ul style="list-style-type: none"> ★ A Cds is loaded in the mechanism.
The stereo Indicator"  "is flashing.	<ul style="list-style-type: none"> ★ Tune in the frequency accurately. ★ The broadcasting signal is too weak. (Set to the MONO mode)
No picture.	<ul style="list-style-type: none"> ★ The Video line from main unit to the TV is not connected properly.
The picture noise appears.	<ul style="list-style-type: none"> ★ Improper setting of the color system. Set the color system to "PAL" or "NTSC". According to the connected television. ★ The Cds is dirty or damaged.

★ *Note: If any of the problem persists after check list had been made, consult your nearest service dealer. Never attempt to disassemble your unit by yourself.*


OPERATING INSTRUCTIONS

 《User Manual》

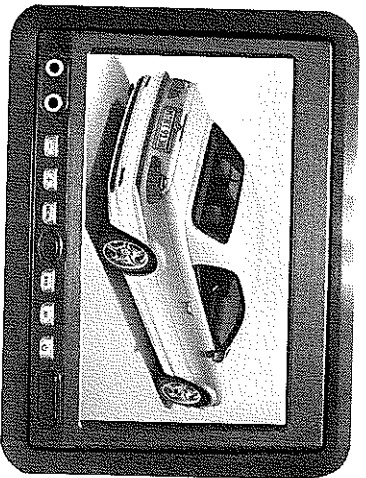

* Before operating the Monitor, please read this manual thoroughly and retain it for future reference.

 
5.8 HEADREST COLOR TFT LCD MONITOR

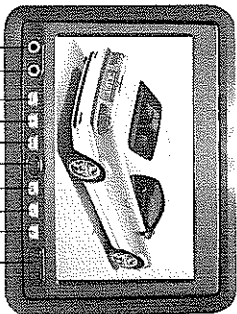

- 1. AV in
- 2. Earphone Out
- 3. Reduce
- 4. Increase
- 5. Menu
- 6. Remote control receiver
- 7. Picture Invert, Down select
- 8. V1/V2 switch, Up select
- 9. power on/off, mute (need to push the key for 3 second for power off)
- 10. IR Headphone Transmitter

FUNCTION:

5.8 HEADREST TFT MONITOR	DISPLAY FORMAT:16:9
RESOLUTION:1440*234 DOTS	SYSTEM:PAL&NTSC AUTO SWITCHING
WIRELESS REMOTE CONTROL	INPUT:2 WAYS VIDEO
EARPHONE/AV IN JACKS ON THE FRONT PANEL	

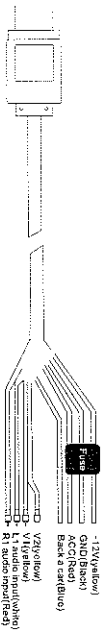 


SPECIAL NOTES

DURING OPERATION, IF THERE IS SYMPTOM OF OVER-HEATING OR SYSTEM MAL-FUNCTION, DO SWITCH OFF THE UNIT AND CONSULT YOUR DEALER IMMEDIATELY. PLEASE DO NOT ATTEMPT TO OPEN UP THE UNIT SINCE THERE IS NO SERVICEABLE PARTS INSIDE.

THE UNIT IS DESIGNED USING HIGH QUALITY ELECTRONIC COMPONENTS AND MANUFACTURED UNDER STRINGENT QUALITY CONTROL SYSTEM. THE SYSTEM UNIT WILL PROVIDE MANY HOURS OF QUALITY PERFORMANCE IF USE CORRECTLY. DO FOLLOW THE MAINTENANCE PROCEDURE BELOW:

 DO NOT USE ANY CHEMICAL SOLVENT, CLEANING AGENT OR CORROSIVE DETERGENT TO CLEAN AWAY DIRT ON THE SURFACE OF THE SCREEN. BY DOING SO, YOU MAY CAUSE IRREVERSIBLE DAMAGE TO THE SURFACE OF THE TFT SCREEN. TO CLEAN OFF DIRT OR FINGER PRINTS, WE RECOMMEND THE USE OF A SOFT DAMP LENS CLEANING CLOTH.

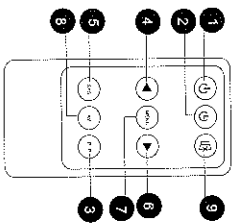

- 1. Power on/off
- 2. Sleep timer switch
- 3. Preset Preference switch (p.p)
- 4. Reduce Button
- 5. Picture Invert, Down select
- 6. Increase Button
- 7. Menu button
- 8. Input source switch, Up select
- 9. Mute on/off

- #### ACCESSORIES
- 1 X POWER CABLE
 - 1 X BRACKET
 - 1 X RELEASE CARD
 - 1 X REMOTE CONTROL

- 1 X MANUAL
- 1 X HEADREST SHROUD
- 1 X AV CABLE